



**Knee Operated Hand Wash Basin
7531.0010**

User Manual
Gebruikershandleiding
Gebrauchsanweisung
Le mode d'emploi



CONTENT

ENGLISH

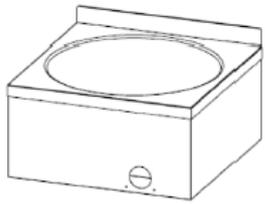
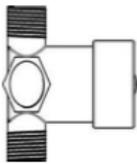
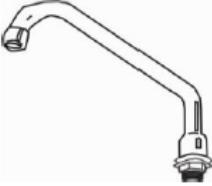
1. General information	3
2. Content of the package.....	3
3. Installation of the hand wash basin	4
4. Cleaning and maintenance	4

INSTALLATION AND MAINTENANCE HANDBOOK

1. General information

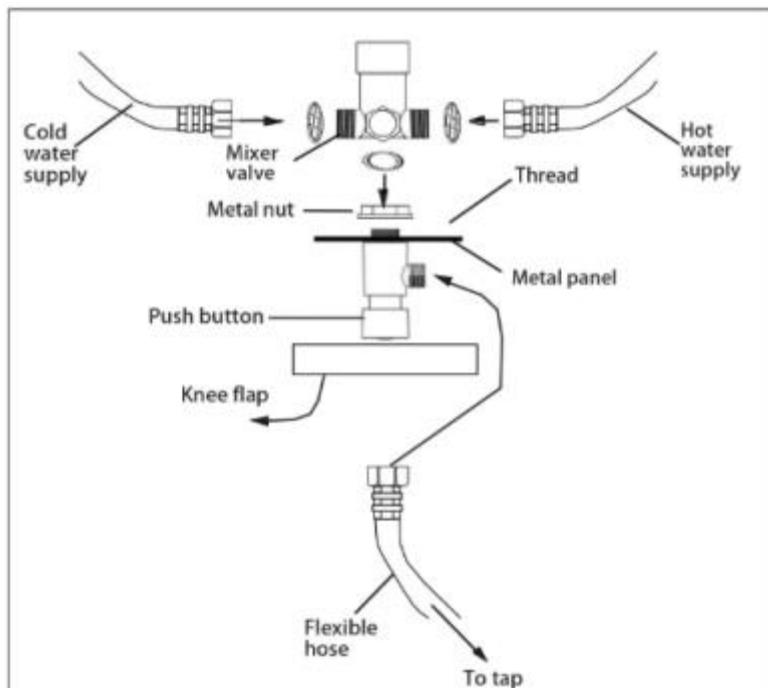
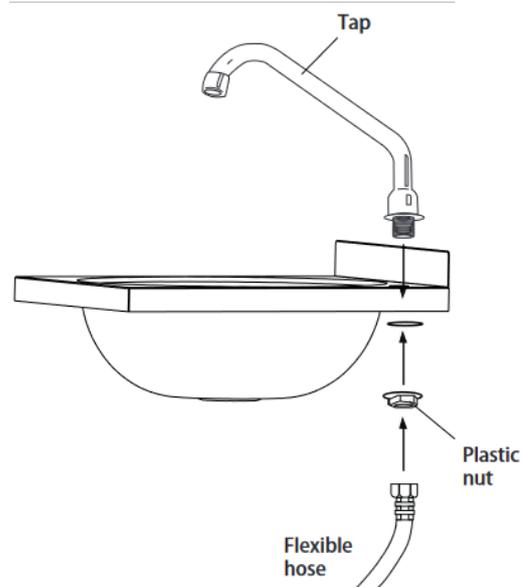
- Read these instructions carefully as they contain important information for the installation of the hand wash sink.
- After unpacking the sink, check whether everything is in a faultless condition. In case of damaged parts, please contact your dealer.
- Dispose the packing material according to the local regulations.
All the package material (plastic bags, cardboards, polystyrene foam, etc.) should not be left within the reach of children, because it is a potential source of danger.

2. Content of the package

SINK: 	MIXING VALVE: 	PLUG UNIT: 
TAP: 	FLEXIBLE HOSE: 	SCREWS AND PLUGS: 

3. Installation of the hand wash basin

- Install the waste trap unit at the sink discharge.
- Put the tap into the hole which is located above the right sink edge.
- Screw the flexible hose (under the sink edge) to the tap.
- Fix the sink with the attached support and the screws in horizontal position on the wall.
- Screw the valve to the tap hose and consider the direction of the water flow. There is the arrow on the valve (see fig. "Push button").
- Put the valve into the hole on the crossbar and lock with the nut.
- If you need the mixing valve for cold / warm water, then mount this valve on the push button.
- The connection to the water supply pipe and also the discharge should be installed by a plumber. These accessories are excluded from the delivery.



4. Cleaning and maintenance

- Hand wash sink should be cleaned daily using water and soap. To clean, use a damp, soft cloth and then dry thoroughly. Do not use abrasive cleaners, such as scouring powder, containing alcohol, thinners, etc.
- Regularly clean the waste trap unit.